

PRO¹

T631W-2

Pro1 Technologies, Inc.

1111 S. Glenstone Ave., Suite 2-100
Springfield, MO 65804

Toll-Free: 888-776-1427 **Web:** www.pro1iaq.com
Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Contact Us	4
Warranty Registration	4



Caution:


Equipment damage hazard
Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.

OPERATING MANUAL


THERMOSTAT QUICK REFERENCE


Getting to know your thermostat

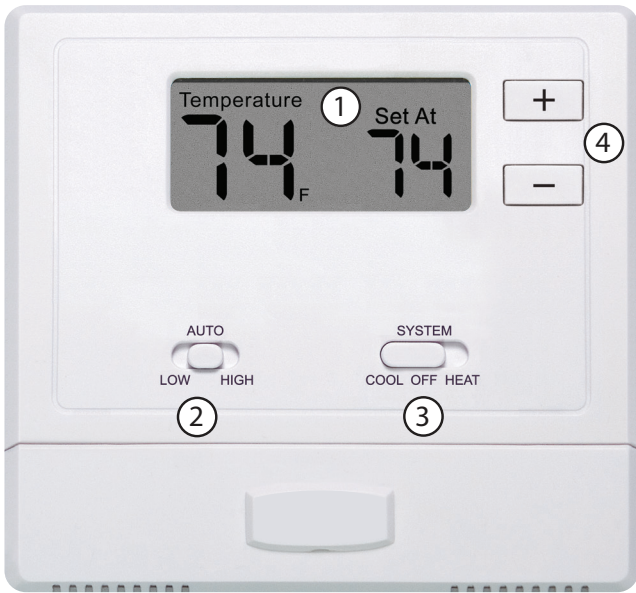

- ② Fan Switch
- ③ System Switch
- ④ Set-point Buttons


① LCD

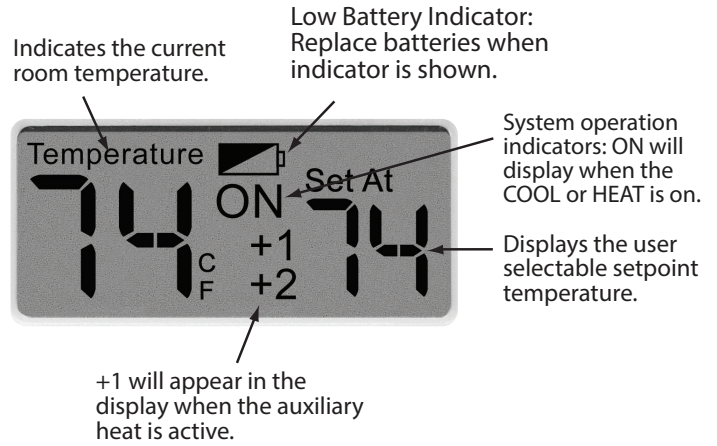

 **Important:** The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable.


Battery Installation

Battery installation is optional if thermostat is hardwired (R and C terminal connected to 24v power).

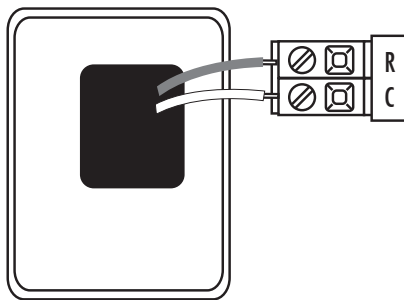


Insert 2 AA Alkaline batteries (included). High quality Alkaline batteries are recommended

Easy to use controls

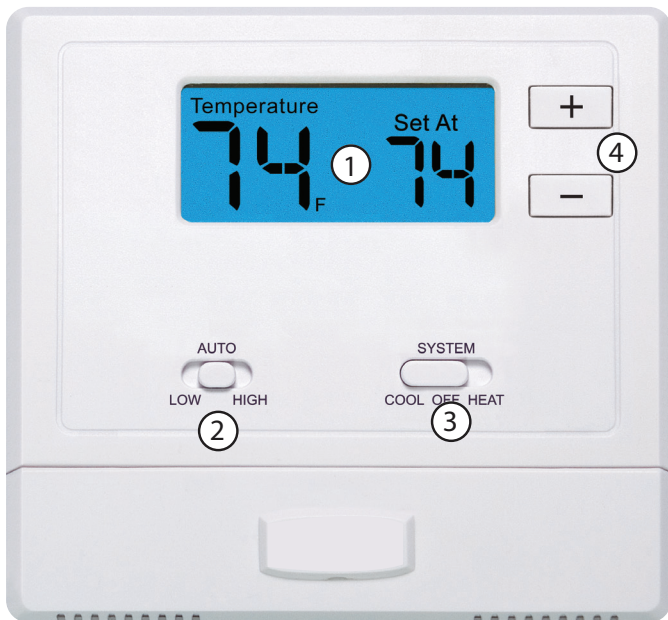

Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- ① **LCD Display:**
See page 2 for details about this display read out.
- ② **Fan Switch:**
AUTO will cycle the fan on only when the heating or cooling system is on. Select **LOW** or **HIGH** for the fan to run continuously at the selected speed.
- ③ **System Switch:**
Selects the operation mode of your **HVAC** system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off.
- ④ **Temperature Setpoint Buttons:**
Press the or buttons to select the desired room temperature.

A Note About Two-Speed Fan:

When the fan switch is set to **AUTO** and the system is in **HEAT** or **COOL**, the thermostat will switch from **LOW** fan to **HIGH** fan when the ambient temperature is 2x swing away from setpoint. The thermostat will switch back to **LOW** fan at 1x swing away from setpoint.

Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to our website, select warranty registration and fill out a short registration form.

- or -

- ② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Thermostat Model: _____

Address: _____

Date Installed: _____

City: _____

Complete form and mail to:

State: _____

Thermostat Warranty Registration

Zip: _____

1111 S. Glenstone
Suite 2-100
Springfield, MO 65804